ELARI® CardPhone

Content

1. Getting started
1.1. Installation of SIM card
1.2. Charging method

2. Buttons

3. Introduction
3.1. Standby interface
3.2. Use of dialing function

4. Menu
4.1. Music player control
4.2. Sound recording
4.3. Bluetooth
4.4. Contacts
4.5. Short Messages
4.6. Call history
4.7. Settings
4.8. Calculator
4.9. Anti-lost function
4.10. Shortkeys

1.1. Installation of SIM card

The SIM card slot is on the upper right side of the back of equipment. According to the instructions, first remove the cover of the slot, then carefully put the SIM card downward into the slot, only then close the cover of the slot. The installation is finished.

Please note that this equipment supports only Micro-SIM card.

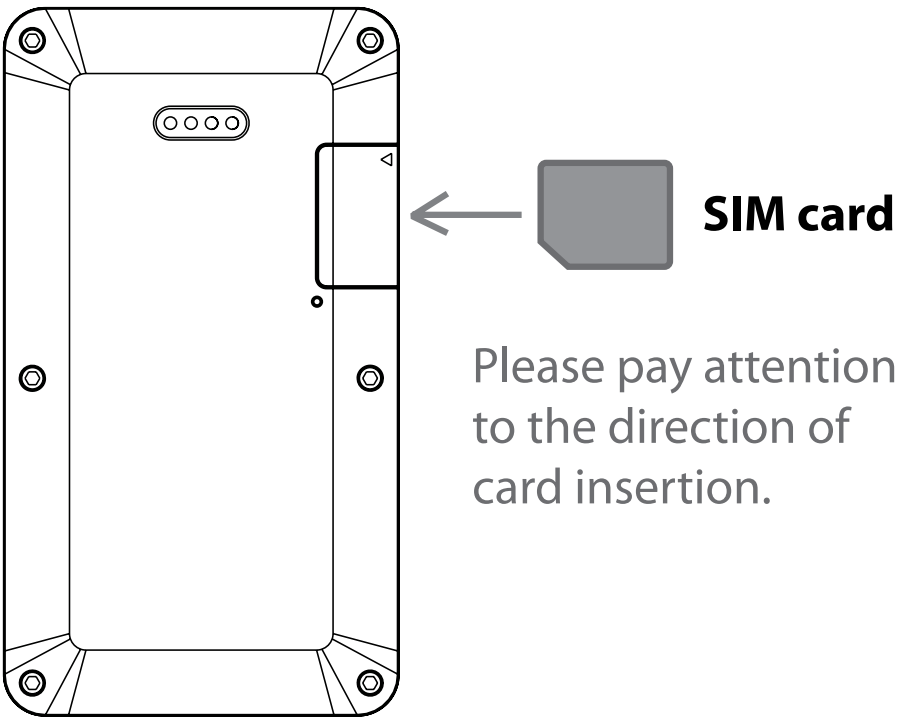

1.2. Charging method

The four hard contacts of the charging clip should correspond to the four hard contacts of the equipment. Press the charging clip to ensure that it is closely attached to the back part of equipment, and then use the USB cable to connect the charging clip to the computer or adapter for charging. When the clip is not charging, take out the clip in the vertical direction. Please avoid the sliding method, because you can easily cause damage to the four hard contacts located on the clip.

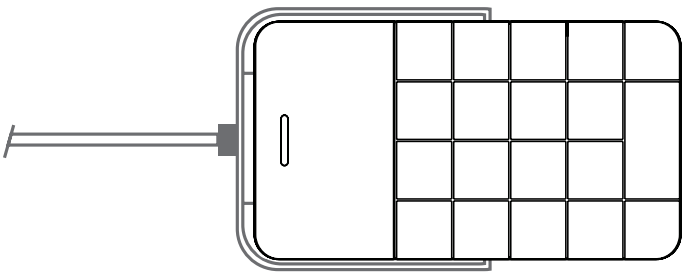

Wrong way of installing charging clip	Right way of installing charging clip
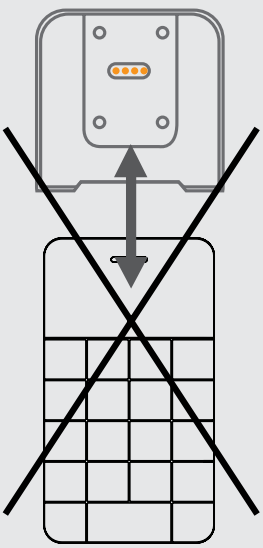	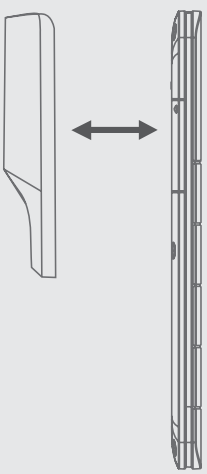
Sliding up and down is not allowed	Installation in the vertical direction

Buttons

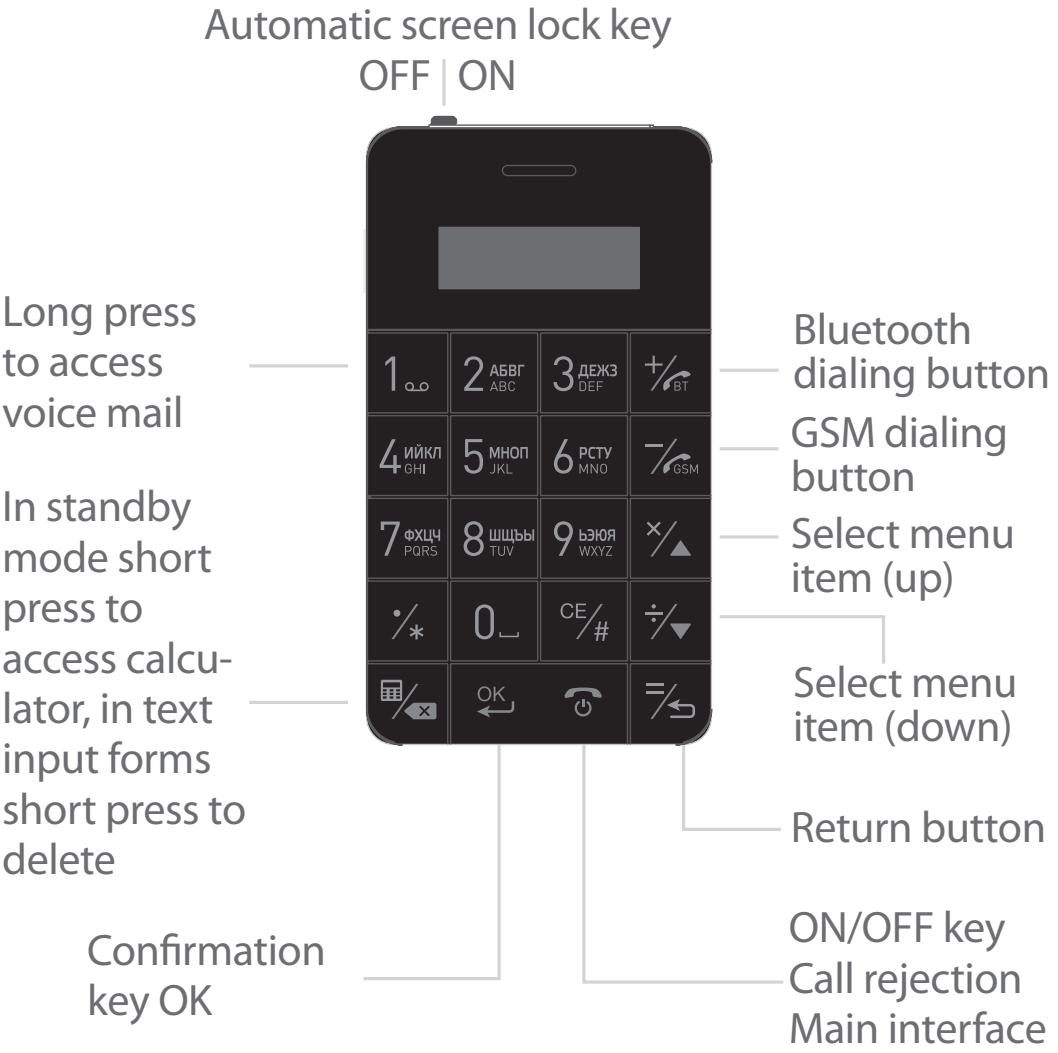
Automatic screen lock key
OFF | ON
Long press to access voice mail
In standby mode short press to access calculator, in text input forms short press to delete
Confirmation key OK
Bluetooth dialing button
GSM dialing button
Select menu item (up)
Select menu item (down)
Return button
ON/OFF key
Call rejection
Main interface

Note: When the automatic screen lock key is in the open position and the mobile phone is not used for the long time, the screen can be blocked. In the closed (off) position the screen does not have automatic blocking function.

3.1. Standby interface

In the stop mode of the equipment, long press of ON/OFF key can turn the phone on, then you can enter the standby mode. Status bar of the standby interface shows the Internet signal, battery capacity, message notification icon if your short message is not read. In the case of turning Bluetooth on a Bluetooth icon will be shown on the screen. In the middle part of the standby interface there is current time. If you press the up or down buttons to select menu item in the standby interface , you can select the menu functions.

3.2. Unlock the screen

When the screen is in the locked mode, press ON/OFF key and # key simultaneously to unlock. If it is necessary to lock the screen, also press ON/OFF key and # key simultaneously.

3.3 Use of dialing function Direct dialing

For direct dialing in the standby interface, please use the digital input of the desired telephone number for outgoing call, if the device is equipped with SIM card, it is possible to use GSM dialing button for the outgoing call. If the smartphone Bluetooth is connected, it is possible to use Bluetooth dialing button for the outgoing call (the smartphone should be equipped with SIM card, for connecting Bluetooth please refer to section 4.3. Bluetooth). If there is an error in the input number, it is possible to use the delete key located in the upper part of the keyboard to delete the incorrect number.

4.1. Music player control

When the equipment and smartphone Bluetooth are connected, you can use the control function for playing music (please note that this function is only control one, it can control the smartphone playing or stopping the music, has the function to play previous or next song).

4.1.1. Use of the menu functions for playing music

In the main menu interface for controlling music reproduction press OK key to access the music control function, then using the selection button (up) and selection button (down) you can select the required function. The square choice box located in the interface can be removed in the left or right side and stopped on the interface of your required function. Press OK key to confirm.

Main menu for music control

Previous song – Pause – Next song

Previous song – Play – Next song

4.2. Sound recording. Start

In the main menu interface for recording press OK key to access the recording function, then using the selection button (up) and selection button (down) you can select the required function. The square choice box located in the interface can be removed in the left or right side and stopped on the interface of your required function. Select the record key to start recording.

Save recording/pause/reject recording

During the process of sound recording the time-reckoning interface can be popped out. At that moment press OK key to open interface with the following functions: «Save, pause, reject the sound recording», then using the selection button (up) and selection button (down) you can select the required function. The square choice box located in the interface can be removed in the left or right side and stopped on the interface of your required function. Press OK key to confirm the selection. If you want to continue sound recording, please select the record key to continue recording.

Play and delete the recording file

In the interface of sound recording menu using the selection button (up) and selection button (down) you can select the required function. Then select the record history menu, press OK key. The list or recording files can be popped out, using the selection button (up) and selection button (down) you can select the required file. Press OK key, you will see the delete button and play button. Using the selection button (up) and selection button (down) you can select the required function. Press OK key to confirm.

Sound recording main menu

Record – List of recordings

Save – Pause – Delete

Delete

Play

Save – Record – Delete

4.3. Bluetooth

4.3.1. Use of different functional icons of Bluetooth menu

Bluetooth ON/OFF

Search for Bluetooth ON/OFF

Name of Buetooth

Search for Bluetooth equipment

After turning on Bluetooth of the equipment, please use the smartphone to search for the name of the above mentioned Bluetooth, then you can click to connect.

4.4. Contacts

In the main interface of contacts menu press OK key to access the list of contacts, using the selection button (up) and selection button (down) you can select the contacts from this phone, synchronize the contacts via Bluetooth and add the contacts.

Contacts main menu

Bluetooth contacts

Contacts from the smartphone

Add the contact

4.4.1. Create new contact on the smartphone

In the contact add interface press OK key, then you will see the input box for name and surname and input box for telephone number, press the up and down selection buttons to input name, surname and telephone number, then again press OK key to save the contact or cancel. Press # key to select the input mode.

Name and surname input box



Telephone number input box

Save

Cancel

4.4.2. Call the contacts

In the list of contacts from this device press the up and down selection buttons to select the contact, then press OK key to open the following menus: «Find the contact», «Send message», «Call the contact», «Edit the contact», «Delete the contact», «Select the storage site», etc. Press the up and down selection buttons to select «Call the contact», then press OK key.

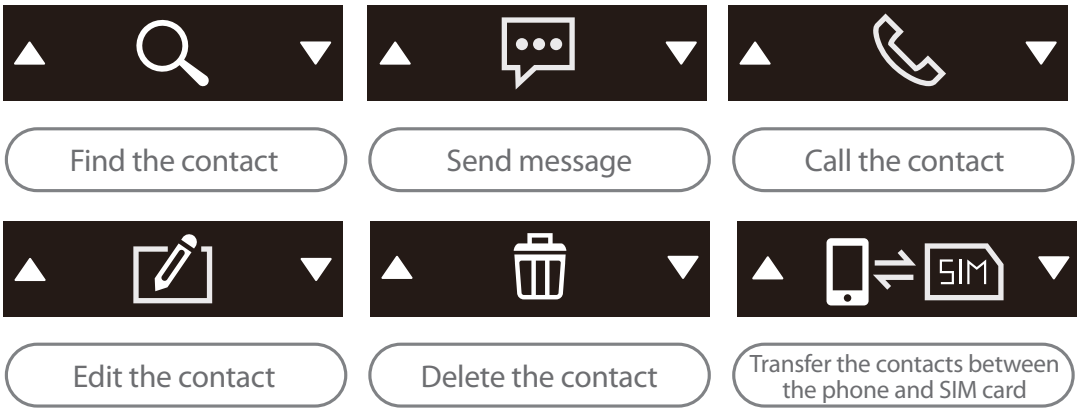

4.4.3. Call the Bluetooth contacts

In the list of Bluetooth contacts press OK key to access the contact view interface, then press OK button once more to enter the menu selection interface of these contacts. Press the up and down selection buttons to select the following functions: «Send message», «Call the contact», «Save in the telephone directory».

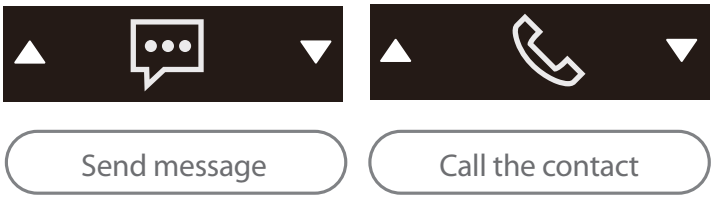

Note: In the list of contacts after selecting the contact you can directly press the Bluetooth key or GSM key in order to dial directly.

Note: In the interfaces for editing short messages, names and surnames of the contacts, etc. press # key to change the input method, press * key to enter the symbol selection interface.

4.5. Short messages

In the interface of short message main menu press OK key to access the short message operational interface, press the up and down selection buttons to select the following functions: «Create new message», «Inbox», «Drafts», «Outbox».

Short message main menu

Create new message

Outbox



Inbox

Drafts

4.5.1. Create and send messages

Select «Create new message», input the message text, then press OK key to select «Send message». While sending the message you can choose the recipient from the list of contacts or input the telephone number of the recipient in the manual mode. After selection press OK key to send the message. Use the up and down selection buttons to select the following menus: «Save message», «Punctuation marks», «Input mode», etc.

Input mode

Send

Punctuation marks

Save as drafts

4.5.2. Inbox

Select «Inbox», then press OK key to access the list of messages, press the up and down selection buttons to select the required message, press OK key to review the text, press again OK key for the following functions: «Reply», «Add the contact», «Delete message», «Forward», «Call», etc.

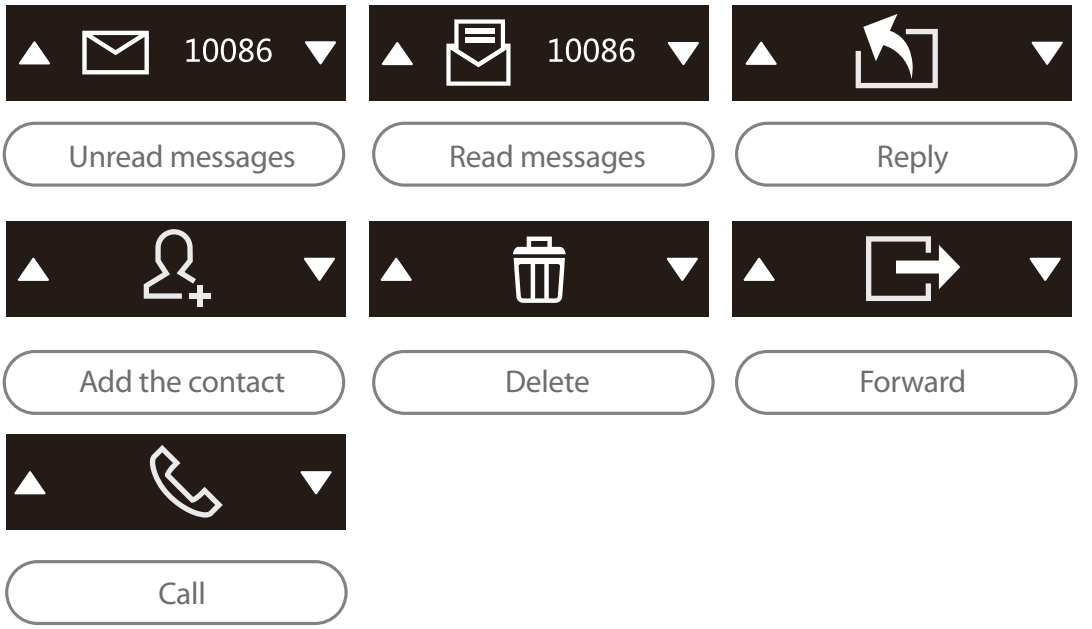

4.5.3. Outbox

Select «Outbox», then press OK key to access the list of sent messages, use the up and down selection buttons to select the required message, press OK key to review sent text, press again OK key for the following functions: «Forward the message», «Delete».

4.5.4. Drafts

Select «Drafts», then press OK key to access the list of drafts, use the up and down selection buttons to select the required message, press OK key to review the text, press again OK key to for the following functions: «Forward», «Edit», «Delete», etc.

Note: In the interfaces for editing short messages, names and surnames of the contacts, etc. press # key to change the input method, press * key to enter the symbol selection interface.

4.6. Call history

Press OK key to enter the call list, then press again OK key to review the details of the call history, then press OK key once again to perform the following functions: «Add the contact», «Call the contact», «Send message», «Delete call history».

Call history main menu

Received calls

Dialed calls

Missed calls

4.7. Settings

Settings

4.7.1. Set up the alarm clock

Enter the settings – «Alarm clock», select the optional time, press OK key to enter the time setting interface. After setting up the time press OK key to perform the following functions: «Ringtone setting», «Repeat mode setting», «Save the alarm», etc. After successful completion of the settings, the round icon on the interface will be solid.

4.7.1.1. How to turn the alarm clock off

Enter the settings – «Alarm clock», select the optional alarm that should be turned off, press OK key to confirm the cancellation, then the round icon on the interface will be blank.

Alarm clock

Setting interface

4.7.2. Phone settings

The phone settings include the following types: «Date settings», «Time settings», «Time zone settings», «Time format settings», «System language settings», «Volume settings», «Provider manual settings», «Screen brightness time settings». For information relating to the details of these functions, please refer to the following figures:

Phone settings

Date settings

Using the phone keyboard directly input the date

Time settings

Using the phone keyboard directly input the time

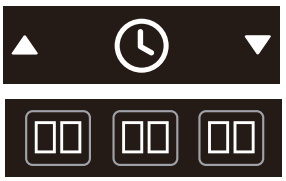

Time zone settings

Select using the up and down buttons
Press OK key to confirm

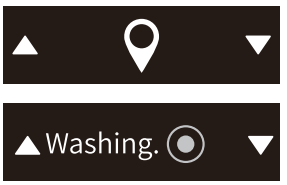

Time format settings

Select using the up and down buttons
Press OK key to confirm

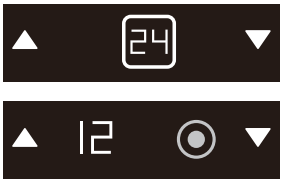

Language settings

Select using the up and down buttons
Press OK key to confirm

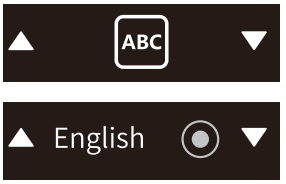

Volume settings

Press the up button to increase the volume
Press the down button to decrease the volume

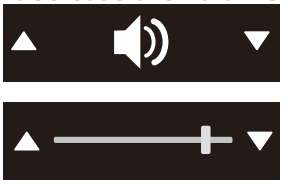

Provider manual settings

Select using the up and down buttons
Press OK key to confirm

Screen brightness time settings

Select using the up and down buttons
Press OK key to confirm

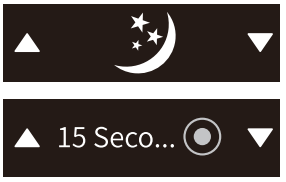

4.7.3. Profiles

There are the following profiles: «Standard mode», «Silent mode», «Conference mode», «Outdoors mode», «Airplane mode». Select the required used mode, press OK key to confirm the settings.

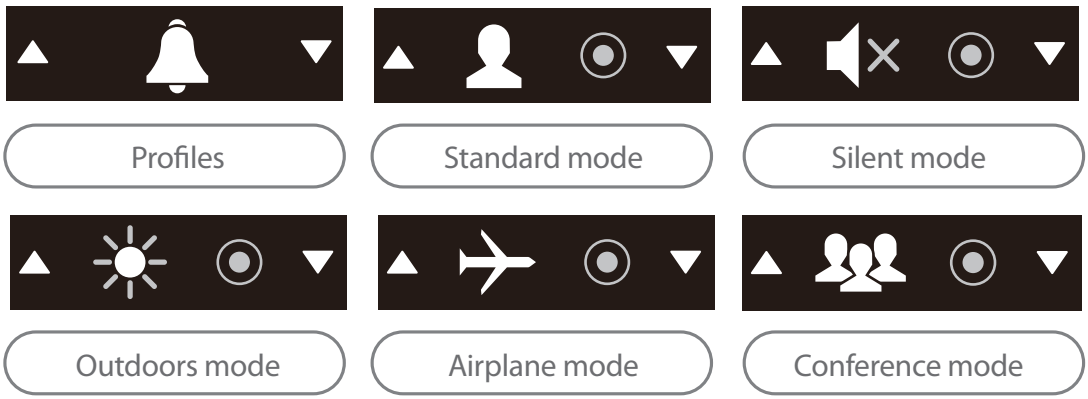

4.7.4. Restore the factory settings

Enter the settings – «Restore the factory settings», press OK key to review the notification, then press again OK key to restore the factory settings. Press the return key to cancel. When you restore the factory settings, you return all the settings of the equipment to the factory level.

4.8. Calculator

In the standby interface press long the calculator button to access the calculator interface, CardPhone will be transferred to the calculator, input the numbers directly to perform the calculation.

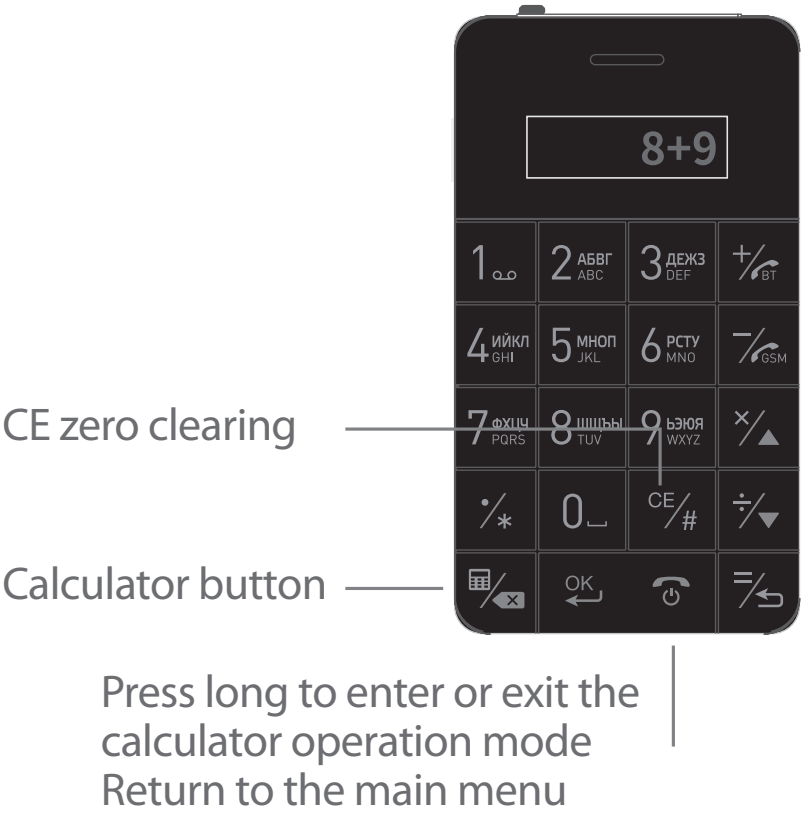

4.9. Anti-lost function

Press OK key to access the «Anti-lost function» function, press again OK key to switch on and switch off «Anti-lost function». (The «Anti-lost function» function is effective only during the connection with the phone Bluetooth).

Anti-lost function

Switch on and switch off

4.10. Shortkeys

1. In the interfaces for editing short messages, names and surnames of the contacts, etc. press # key to change the input method, press * key to enter the symbol selection interface.

2. In the conversation mode press OK key to activate or deactivate hands-free mode.